

# UPS Cyberpower

Référence Ubuntu 20.04.3

## Installer le logiciel de gestion d'UPS

```
sudo dpkg -i PPL-1.3.3-64bit.deb
```

```
sudo pwrstat -status
```

```
pwrstat -help
```

```
sudo pwrstat -pwrfail -shutdown on
```

```
sudo pwrstat -pwrfail -delay 600
```

```
sudo pwrstat -lowbatt -shutdown on
```

```
sudo pwrstat -config
```

```
sudo pwrstat -test
```